

Introduction for SkypeMate box

General description:

USB phone adaptor with PSTN port, support any ordinary phone make/receive both Skype and PSTN call.



Features:

1. Support any ordinary phone make/receive both Skype and PSTN call, if use a cordless phone even unties you from your computer while making/receiving Skype calls.
2. Supports Skype speed-dial and SkypeOut service.
3. No power adapter required.
4. Press“*” key to shift PSTN and Skype mode when make a call.
5. Automatically detect PSTN or Skype status when receiving a call.
6. Phone rings for incoming PSTN and Skype calls.
7. Three LED indicates working state respectively: Power\ PSTN \Skype.

Highlight:

1. There is dial tone at VOIP mode.
2. Automatically dial out the number after the defined time when make Skype call, no need press “#” key to finish the number input.
3. Won’ t miss any incoming PSNT call: if PSTN call come in during Skype conversation, just press “*” to answer, and press “*” again to continue the Skype conversation.
4. Reverse line polarity for phone billing meter.
5. If user directly make Skype call on PC, just pick up the handset of phone to have conversation, no need additional operation.
6. Support 990 group 2-3 digit Speed-Dial number for Skype contact and ordinary phone number.
7. NO need input country code when make domestic call if you already set the country code in the configuration menu.

Interfaces :

USB port ---- connect to PC

LINE port ---- connect to PSTN line

PHONE port ---- connect to any telephone(corded phone or cordless phone)

System Requirement :

Pentium 400MHz or equivalent

Windows 2000 or XP or Vista

Available USB port (1.0, 1.1 or 2.0)

Communication software Skype must be installed (please install Skype software from CD provided)

256M RAM

10M available hard disk space

Accessories:

USB cable: 1pcs

main line: 1pcs

install driver: 1pcs

user manual: 1pcs




usb cable



main line



intall driver

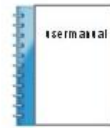

user manual